




ASSEMBLY GUIDE

Manual for product codes: Front Panel - 157/000 End Panel 167/000

1. Your bath should be installed to the manufacturers recommended height. Refer to the instructions supplied with the bath and ensure that the top of the bath is level.

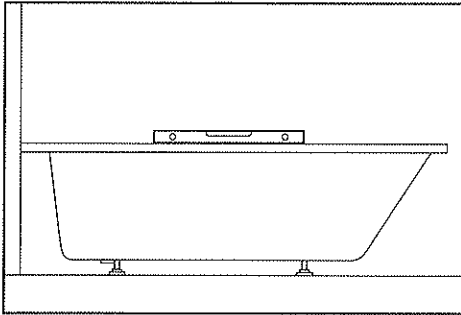



2. Measure the dimensions A and B as illustrated on the bath and mark onto the *front panel*. Note: the *kick strip* is to be used for any adjustment to the height of the *front panel*, not the lip. Also make sure the *front panel* is the correct way up and facing the correct direction before marking.

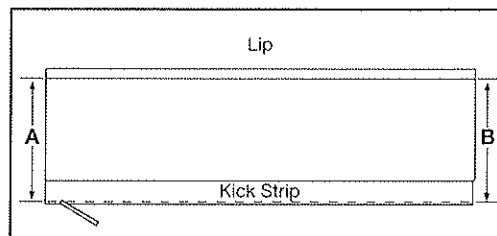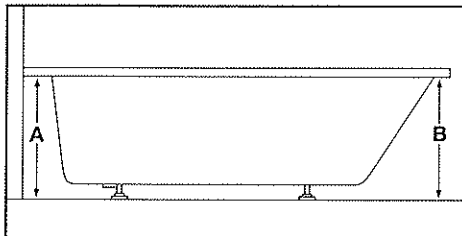

Adjust the height of the *front panel* by:


- a) making an initial 1" cut at either end of the line using a junior hacksaw.
- b) carefully score along the line using a stanley knife and straight edge (a wood support should be used under the panel for support whilst scoring).
- c) gently bend the *front panel* along the scored line, then bend back in the opposite direction, repeat until the excess breaks away cleanly.

3. Position and secure wall and floor battens as illustrated (these are not included).

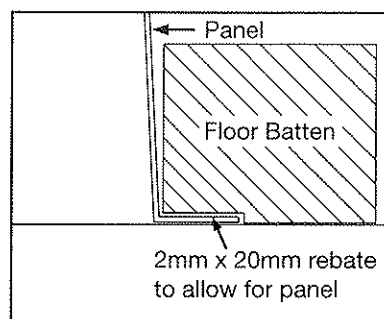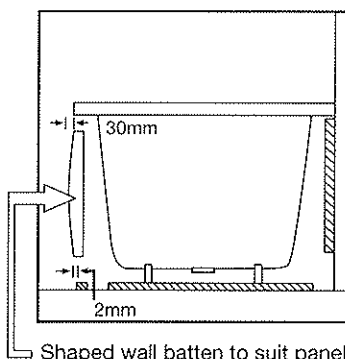

Shaped wall batten to suit panel

4. Fit the front panel by inserting the lip under the rim of the bath. Secure to the wall and floor battens with suitable screw fixings (not supplied).

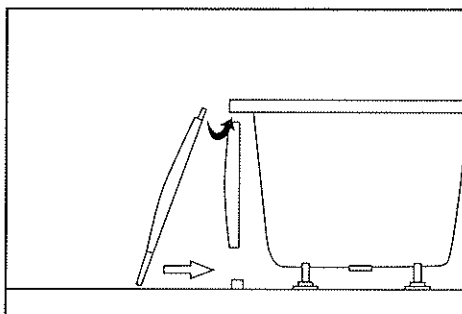

End Panel:

Repeat instructions 2-4 for the end panel if fitted