


Timber Floor - Waterproofing

A guide to Waterproofing your wetroom

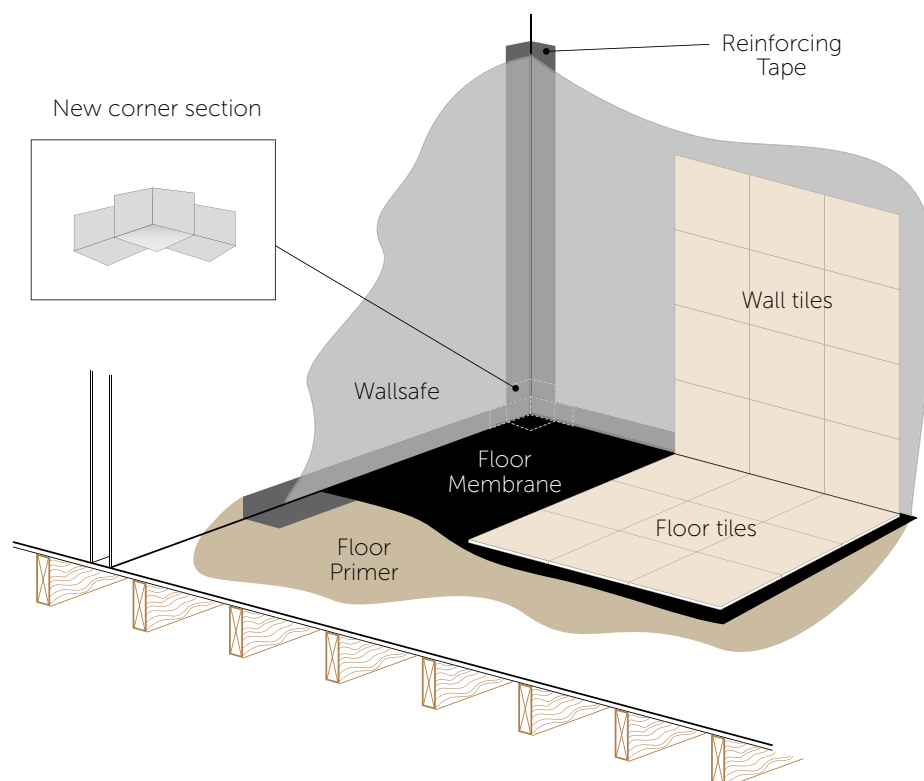

The importance of Waterproofing

The primary concern for anyone choosing to create a Wetroom is whether the floor or walls will either absorb, or worse let water through. Through our painstaking research and development we have created a system that is guaranteed, not just for a few years, but for life. The two components of this system are firstly the floor membrane and secondly the wall membrane, which are the key products for waterproofing the wetroom floor and walls.

We offer two self adhesive waterproof solutions for the floor membrane designed for use prior to the application of ceramic tiles and natural stone onto timber and solid floors in wetrooms:

- Tilesafe - the professional's choice for over 15 years, extensively used in both commercial and domestic sectors, is a cold-applied self adhesive membrane which consists of a thick rubberised bituminous waterproof layer incorporating a woven glass fibre mesh on one side. Tilesafe has been accredited as an anti-fracture/de-coupling membrane by the UKAS, which means that the effects of possible movement in a timber floor substrate, such as cracked tiles or

grout, are minimised. Tilesafe has been acoustically tested and rated according to BS EN ISO 140-8 and BS EN ISO 717-2 and will typically reduce sound transfer by 11dB.

- Floorsafe – developed as a light weight, easy-fit, domestic product, is a cold-applied self adhesive membrane which consists of a thin rubberised butyl waterproof layer with a fleece top surface.

For Walls we recommend Wallsafe:

- A flexible single application paint-on waterproofing membrane, applied to the wall surfaces prior to the application of ceramic tiles and/or natural stone in wetrooms.

Application

For timber floors we recommend that either floor membrane, Tilesafe or Floorsafe, is applied to the entire wetroom floor or at least to a distance of no less than 1 metre from the shower area. Wallsafe should then be applied to the walls of the shower area and overlapped onto the reinforcing tape.

2

&

3

Select your **Waterproofing** products



Floor Membrane Kits



Tilesafe 5m² Kit

500ml Primer, 10m Reinforcing Tape 5m x 1m Membrane 310ml Jointing Compound, 500g Putty 2 x Tilesafe Pre-formed Corners

Floorsafe 5m² Kit

500ml Primer, 10m Reinforcing Tape 5m x 1m Membrane 310ml Jointing Compound 2 x Pre-formed Corners

Tilesafe 10m² Kit

1ltr Primer, 15m Reinforcing Tape 10m x 1m Membrane 310ml Jointing Compound, 500g Putty 2 x Tilesafe Pre-formed Corners

Floorsafe 10m² Kit

1ltr Primer, 15m Reinforcing tape 10m x 1m Membrane 310ml Jointing Compound 2 x Pre-formed Corners

Choose from either Tilesafe or Floorsafe kits:

Tilesafe Kit offers the following features:

- Suitable for timber and solid floors
- De-Coupling & Acoustic insulation properties
- Heavy duty for Commercial and Domestic use
- Self-adhesive - quick and easy to apply
- Ready to tile immediately

Floorsafe Kit offers the following features:

- Suitable for timber and solid floors
- Self-adhesive - quick and easy to apply
- Ready to tile immediately

ITEM	CODE
Tilesafe 5m Kit	716544
Tilesafe 10m Kit	716545

Wall Membrane



Wallsafe

Wall Membrane

- Solvent-free
- Quick and easy single coat application
- Compatible with Tilesafe and Floorsafe
- Suitable for use on all commonly encountered substrates
- Covers up to 8m²



ITEM	CODE
Wallsafe Liquid 8kg	894785

Reinforcing Tape



Tilesafe

Reinforcing Tape
7.5m roll

Floorsafe

Reinforcing Tape
10m roll

Reinforcing Tape is 150mm wide self-adhesive waterproofing tape for sealing critical details such as wall junctions, soap recesses, pipe boxing and other such areas prior to tiling. Choose either Tilesafe or Floorsafe versions according to the Floor Membrane Kit selected.



ITEM	CODE
Tilesafe Tape 7.5m	311939